



**File Name:** bt verve cordless phone manual.pdf

**Size:** 3415 KB

**Type:** PDF, ePub, eBook

**Category:** Book

**Uploaded:** 9 May 2019, 23:58 PM

**Rating:** 4.6/5 from 818 votes.

**Status:** AVAILABLE

Last checked: 4 Minutes ago!

**In order to read or download bt verve cordless phone manual ebook, you need to create a FREE account.**

[\*\*Download Now!\*\*](#)

eBook includes PDF, ePub and Kindle version

[Register a free 1 month Trial Account.](#)

[Download as many books as you like \(Personal use\)](#)

[Cancel the membership at any time if not satisfied.](#)

[Join Over 80000 Happy Readers](#)

### Book Descriptions:

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with bt verve cordless phone manual . To get started finding bt verve cordless phone manual , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



**Book Descriptions:**

**bt verve cordless phone manual**



Our dedicated. Only use the power and telephone cables supplied with the product. Batteries and handset may become warm during charging. Charge the battery for at least 20 hours. Back Your BT Verve 450 is ready for use. Press to switch the call between the earpiece and the loudspeaker. Back option New entry. Once an entry has been stored the full menu is displayed. Or press to return to the

previous menu level. Enter date 8. Press to save. 9. Press to return to the previous menu level. The alarm Alarm rings for 60 seconds. 1. Press to stop the alarm. Back when a missed call is received. Back Set the maximum message length 30, 60, 120 or 180 seconds. The messages are renumbered to take account of any deleted messages. During playback to delete the current message. The default setting is 0000. Press 5. Enter a new PIN. Press. Enter the PIN again and press to save. Enter your message. Press then press Option The caller's number is displayed. Back Or press to return to standby. These alerts can be switched On or Off. The default setting is On. The display shows Registering. Scroll Select handset. Press to join all callers. Play and delete old messages, see page 5051. Try using another socket or line. Call BT on 151 if you still experience problems. It is recommended that you place your BT Verve 450 at least one metre away from electrical appliances or metal obstructions to avoid any risk of interference. Check the prompts in the display or refer to instructions in this user guide. Mobile and International call costs may vary. Only use the power and telephone cables supplied with the product. Batteries and handset may become warm during charging. Your BT Verve 410 is ready for use. When storing an entry in the directory, press and hold to enter a Pause, page 67. Press Option Delete 4. Press to confirm or to cancel. 5. Press to return to the previous menu level. Once an entry has been stored the full menu is displayed. Or press to return to the previous menu level. Enter date 8. Press to save.

9. <http://www.extrusiongroup.com/fckupload/dbx-166xl-user-manual.xml>

- **bt verve cordless phone manual, bt verve cordless phone manual download, bt verve cordless phone manual pdf, bt verve cordless phone manual free, bt verve cordless phone manual instructions.**

## BT Verve 450

User Guide



Press to return to the previous menu level. The alarm Alarm rings for 60 seconds. 1. Press to stop the alarm. Enter your message. Press then press Option The caller's number is displayed. Back Or press to return to standby. These alerts can be switched On or Off. The default setting is On. The display shows Registering. Scroll Select handset. Press to join all callers. Check that you have stored the full STD dialling code. Try using another socket or line. Call BT on 151 if you still experience problems. If you have another network provider please check the prefix number with them. In order to send and receive text messages you must not withhold your number. If you normally withhold your number the 1470 prefix presents your number for you. Check the prompts in the display or refer to instructions in this user guide. User Guide Page 3 Section. This User Guide provides you with all Got everything Page 4 4 In this guide Sounds New call alert..... Page 6 6 In this guide Page 8 8 Getting started The answering machine is Page 9 Getting started 9 Page 11 Getting to know your phone

11Base. Off hook light Power light FindFlashes. Page 14 14 Getting to know your phoneMenu mapPage 16 16 Using the phonePage 17 Using the phone 17Page 19 Using the phone 19Page 21 Using the phone 21Page 22 22 Using the phonePage 23 Using the phone 23Page 24 24 Using the phonePage 26 26 Using the phonePage 27 Using the phone 27Page 28 28 Using the phonePage 29 Using the phone 29Page 31 Sounds 31Page 32 32 SoundsPress or to selectPage 33 Settings 33When you have more than one. Page 36 36 SettingsPage 37 Settings 37Page 38 38 SettingsPage 39 Settings 39When a Calls list is open. Page 42 42 Calls listsPage 43 Calls lists 43Page 44 44 BT Network ServicesPage 47 Answering machine 47Page 48 48 Answering machine.<http://www.lospinello.it/public/news/dbx-1bx-manual.xml>



Page 49 Answering machine 49Page 53 Answering machine 53Page 54 54 Answering machinePage 55 Text messaging 55Page 56 56 Text messagingIt is storedPress Option to Send, Store,Page 59 Text messaging 59Page 60 60 Text messagingPage 66 66 Using additional handsetsPage 67 Help 67Page 69 Help 69Page 71 Help 71Page 72 72 HelpPage 76 76 General informationPage 77 General information 77. Technical information Connecting to a switchboardPage 78 Page 79 Page 80 Offices worldwide. The services described in this publication are subject to availability. Touch device users, explore by touch or with swipe gestures. Shop Account Wishlist Trolley Thank you for your continued patience and support. Our range includes simple and stylish options in a range of colours and designs. Whether you need an extension kit or a conference call speakerphone for those days when you decide to work from home, take a look at our telephone accessories to find the solution. Just moved to a new house and got your landline up and running. A brandnew phone is the perfect finishing touch. Cordless phones give you the freedom to roam while you're on a call, so you can carry on with your household tasks while you pay that bill or book dentist appointment. A digital display with caller ID means you'll always know who's on the other end of the line. If your home has more than one floor, you might consider twin cordless phones for additional convenience. Why not go for one with a dedicated block button so you can crack down on those nuisance calls. Looking for something a little bit different.If you're on the move, then mobile phones will let you stay connected no matter where you are or what you're doing. Learn more here Buy online using We accept the following payment methods online Need Help. All Rights Reserved. Answering machine with up to 15 minutes digital recording time and helpful voice prompts. 200 Name and number phonebook to store all your contact numbers for easy dialling.

Store a directory entry then copy it or the entire phonebook to another BT Verve 450 handset. Send

and receive text messages. 1 Quick access to a range of BT Services including directory enquiries and call divert. Caller Display lets you see who's calling and your phone stores details of the last 20 callers in a Calls list. 2 Register up to 5 handsets to the base without the need for additional wiring. Digital call quality with a range of up to 300 metres outdoors and up to 50 metres indoors in ideal conditions. 1 You must subscribe to your network provider's Caller Display Service for text messaging to work and you must not withhold your telephone number. A quarterly fee may be payable. Some other network provider lines may not be compatible with this text messaging service. 2 You must subscribe to your network provider's Caller Display or Call Waiting service for these features to work. Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services. Before you make your first call you will need to set up your phone. Follow the simple instructions in Getting Started, on the next few pages. Our dedicated advisors are more likely to be able to help you than the retailer where you made your purchase. Alternatively, you may find the answer in the Help section at the back of this guide. Mobile and International call costs may vary. Make sure it is at least 1 metre away from other electrical appliances to avoid interference. Your BT Verve 450 works by sending radio signals between the handset and base. The strength of the signal depends on where you site the base. Putting it as high as possible ensures the best signal. Setting up 1. Plug the mains power cable into the socket marked on the underside of the base and plug the other end into the mains power wall socket and switch the power on.



<http://www.drupalitalia.org/node/71889>

You can place the cable behind the retaining clip to prevent the plug being accidentally pulled from the socket. **WARNING** Do not place your BT Verve 450 in the bathroom or other humid areas. Handset range The BT Verve 450 has a range of 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and handset either indoors or outdoors, the range will normally be up to 50 metres. Thick stone walls can severely affect the range. Signal strength The icon on your handset indicates when you are in range. If moving out of range of the base, the range indicator will flash. If you go out of range, any call you are on will be lost. Which power adaptor. If you have purchased a multiple pack, you should use the power adaptor with the smallest plug for the base. **IMPORTANT** The base station must be plugged into the mains power socket at all times. Do not connect the telephone line until the handset is fully charged. Only use the power and telephone cables supplied with the product. You also hear a low battery warning beep once every 60 seconds. During charging, the icon will scroll in the display. Battery performance In ideal conditions, a fully charged battery should give up to 10 hours talk time or 100 hours standby time on a single charge. Note that new batteries do not reach full capacity until they have been in normal use for several

days. To keep the battery in the best condition, leave the handset off the base for a few hours at a time. Running the battery right down at least once a week will help it last as long as possible. Eventually they will need to be replaced. After charging your handset for the first time, subsequent charging time is about 6-8 hours a day. Batteries and handset may become warm during charging. This is normal. The base indicator lights up. The answering machine is switched on. 2.

<http://ekobart.com/images/bosch-website-manuals.pdf>

**Home STOREWORLD** **BT 3580 Trio Digital Cordless Telephone with Answer Machine**



- **HANDSFREE FACILITY**
- **50 NAME AND NUMBER MEMORIES**
- **ANSWER MACHINE RECORDING TIME 20MINS.**

The NiMH battery is already fitted in the handset. Remove the battery compartment cover, by sliding it downward and lifting it off. Locate the battery lead and connector and plug it into the socket inside the battery compartment the red wire should be on the left. Tuck the battery leads in the space above the battery and slide the battery compartment cover back on. 3. Place the handset on the base to charge for at least 20 hours. When the handset is fully charged the icon will be displayed. 4. When the battery is fully charged, plug one end of the telephone line cord into the socket marked on the rear of the base and the other end into the telephone wall socket. Note Battery removal If you ever need to remove the batteries, simply slide open the battery compartment cover, lift the battery and unplug the connector. For each additional handset and charger 1. Insert the cable through the channel at the rear of the charger and insert the plug into the power socket. Plug the other end into the mains wall power socket and switch on. Using your BT Verve 450 on a Broadband line. If this product is to be used on a broadband line then you must ensure that it is connected via an ADSL microfilter. Using this product on a Broadband line without an ADSL microfilter may cause problems with this product and your Broadband service. Additional BT ADSL microfilters can be purchased from 2. The NiMH battery is already fitted in the handset. Remove the battery compartment cover, by sliding it downward and lifting off. Tuck the battery leads in the space above the battery and slide the battery compartment cover back on. Charge the battery for at least 20 hours. The date and time is recorded with each answering machine message you receive. If you do not have a Caller Display service you can set the date and time manually. Any additional handsets supplied as part of a multipack are preregistered to the base so, once charged, are ready for use. The handset number is shown in the display.

<http://www.eleco99.com/images/bosch-water-heater-service-manual.pdf>



Your BT Verve 450 is ready for use. Option button right Press to select options displayed on screen. UP Redial In standby, press to open and scroll through the Redial list, page 19. In talk mode, press to adjust volume. In menu mode, press to scroll up through the options. Option button left Press to select options displayed on screen. LEFT Directory In standby, press to access the directory. When on a call press to mute the handset. When entering text, press to move the cursor left. When listening to answering machine messages, press to play the previous message, page 50. Handsfree In talk mode, press to switch handsfree on and off, page 18. When entering text, press to move the cursor right. When listening to answering machine messages, press to skip to next message, page 50. DOWN Calls In standby, press to open and scroll through the Calls list, page 40. In menu mode, press to scroll down through the options. Talk In standby mode, press to make and receive calls, page Voic In standby, press and hold to dial your network s voic service 1571, page 43. Press and hold to switch the handset ringer on or off. When entering text, press to switch between upper and lower case letters. 0 When storing an entry in the directory, press and hold to enter a Pause, page 77. Scrolls when the handset is charging. Empty when filled in black. On displayed in standby mode to indicate handset is in range of the base. Flashing to warn you are moving out of range. Off out of range or cannot connect to the base selected. On during a call. Flashing incoming call. On handsfree speaker on. Off answering machine off. Flashing new answering machine message. On new text message received. Flashing mailbox is full. Off all messages have been r ead. On alarm is set. Flash alarm time has been r eached. Off alarm off. The keypad is locked. A quarterly fee may be payable. Text message light On you have new messages. Flashing sending message Off all messages have been read.

Del Delete answering machine messages. Power light On power on. Find Press to ring all registered handsets, helpful for finding a missing handset, page 22. Also used during the registration process, page 63. Answering machine display Answering machine off Answering machine on, number of messages stored. Flashes when you have new, unplayed messages.I SKIP Press once to repeat the current message, twice to play the previous message. SKIP I Skip forward to the next message. Stop Stop play back. Play Play messages. Int Menu Options Up Down If no buttons are pressed for 30 seconds, the handset returns to standby automatically. Navigating the menus Your BT Verve 450 has an easy to use menu system. Each menu has a list of options, which you can see on the menu map on the following page. When the handset is switched on and in standby 1. Press Menu to open the main menu. 2. Then use or buttons to scroll through the available options. 3. Press the OK option button to select a menu option or the Back button to return to the previous screen. To exit a menu and return to standby, press. Call timer Your handset will automatically time the duration of all external calls. The handset display shows the call duration both during and for a few seconds after your call.



Out of range warning When the handset goes out of range of the base, the handset flashes. If you are on a call, the line will hang up. Move back within range. The handset will automatically reconnect to the base. Switch handset on or off To switch off 1. Press and hold. 2. Switch off is displayed, press Yes to confirm. To switch on 1. Press and hold. 2. Switch off is displayed, press No. Make an external call 1. Press. 2. When you hear the dial tone, dial the number. Preparatory dialling 1. Dial the number first. If you make a mistake press Clear to delete the last digit. 2. Press to dial. End a call 1. Press. The display shows the caller's number if available or the caller's name if it matches an entry in the phonebook.

<https://fermuar.com/wp-content/plugins/formcraft/file-upload/server/content/files/1626c37b8bbdf6---a-brief-introduction-to-fluid-mechanics-student-solutions-manual.pdf>

If you do not have a Caller Display service, the screen shows External call. 1. Press. Auto answer As long as you have auto answer set to ON you can answer a call by lifting the handset off the base. If you have switched auto answer off, you will need to press as well. Auto answer ON is the default setting. See page 33. Call Waiting Providing you have subscribed to your network's Call Waiting service and it is switched on, your BT Verve 450 will alert you to a second incoming call while you are already engaged on an external call. To switch your call waiting service on or off, see page You will hear the call waiting tone and the display will show the number of the caller, or the name if it matches an entry in your directory. 2. Press to answer the new call and your first caller is put on hold. 3. Press to toggle between the two callers. 4. Press to hang up the current call. There are 5 levels. 1. Press or to increase or decrease the volume. Secrecy Mute During a call, you can talk to someone nearby without your caller hearing. 1. Press. The display shows Mute on and your caller cannot hear you. 2. Press again to return to your caller. Handsfree Handsfree lets you talk to your caller without holding the handset. It also enables other people in the room to listen to your conversation over the loudspeaker. During a handsfree call, press to change the volume. Press to switch the call between the earpiece and the loudspeaker. Answer a call handsfree When the phone rings 1. Press. The call is transferred to the handset loudspeaker. Switch to handsfree during a call 1. During a call press to put the call on the loudspeaker. To switch handsfree off and return the call to the earpiece, press again. Redial Up to the last 15 telephone numbers called are saved in the redial list. You can then select any of the numbers to redial, delete or copy to the directory. Redial the last number called 1. Press the last number you called is displayed. 2. Press to dial.

Press Clear to delete any unwanted digits and then enter new ones using the keypad. If the directory is full, the display shows Memory full and the number will not be saved. You will need to delete a number in the directory first, see page Press OK. The entry is saved. Press Back to return to the previous menu level. Delete a redial number 1. Press. The last number dialled is displayed. 2. Scroll or to the number you want. 3. Press Option. Delete is highlighted. Press OK. Delete all redial numbers 1. Press. The last number dialled is displayed. 2. Press Option and scroll to Delete all and press OK. 3. Press Yes to confirm or No to cancel. 4. Press to exit and return to standby. Keypad lock You can lock the keypad so that it cannot be used accidentally while carrying it around. To lock the keypad 1. Press and hold. The handset beeps and Keypad locked is displayed. WARNING If the keypad is locked you will be able to dial the emergency numbers 999 and 112. When the keypad is locked you can still answer incoming calls and operate the handset as normal. When the call is ended, the keypad lock comes on again. To unlock the keypad 1. Press and hold. The handset beeps and Keypad unlocked is displayed for 2 seconds before returning to standby. 22 22 Using the phone Paging calls cannot be answered by a handset. Find handset Paging You can ring a handset to help locate it. 1. Press on the base. All handsets registered to the base will ring for up to 30 seconds. 2. Press on the base again to stop the ringing or press a button on any handset. Names can be up to 15 characters long and numbers up to 24 digits. Store a name and number 1. From standby, press. The directory menu is displayed. 2. When storing the first entry New entry is highlighted. Press OK.

When storing further entries The directory list is displayed, with the first entry highlighted. Press Option. New entry is highlighted. Press OK. 3. Enter the name. 4. Scroll to Number and enter the number. 5.

If required, scroll to Select group. Scroll or to set the group you want. Press OK. Display shows Saved. 6. Press Back to return to the previous menu level. Entering names Use the keypad letters to enter names, e.g. to store Tom Press once to enter T. Press three times to enter o. Press once to enter m. Writing tips Press Clear to delete the last character or digit. Press to switch between upper, lower or sentence case. Press to insert a space. You must enter a name to go with a number. To enter a pause in a directory number When storing a number press and hold and a P will be displayed. For more information on pauses, see page 77. Directory empty If the directory is empty and you press, the display shows the directory option New entry. Once an entry has been stored the full menu is displayed. 24 24 Using the phone View an entry 1. Press. The first entry is displayed. 2. Scroll or to the entry you want. 3. Press Option and scroll to View. 4. Press OK. Scroll or to view the name, number and group. 5. Press Back to return to the previous level. To search alphabetically Press the relevant keypad button, e.g. for the entries beginning with T press once then scroll or through the entries. Call groups Your options are General Family Business Friends Utilities VIP Others No Group View directory capacity 1. From standby, press. The directory is displayed. 2. Press Option. Scroll to Capacity and press OK. Dial an entry 1. In standby, press. The first entry is displayed. 2. Scroll or to the entry you want or search alphabetically. 3. Press to dial. 25 Using the phone 25 Edit a name and number 1. Press. 2. Scroll or to the entry you want. 3. Press Option and scroll to Edit entry and press OK. 4. Use the keypad to enter a new name. 5. Scroll to Number to enter a new number. 6. Scroll to Group to select a different group. 7. Press OK to save or Back to return to the previous menu level. When editing a name or number, press Clear to delete characters and digits.

Copy an entry 1. Press. Then scroll or to the entry you want to copy. You can copy an entry to another handset registered to the base. 2. Press Option and scroll to Copy and press OK. 3. Press or to select the handset you want to copy to and press OK. At the receiving handset 4. Display shows Receive dir.If you copy an entry that already exists in the receiving handset it will create a duplicate entry. 26 26 Using the phone Copy all entries You can copy the entire directory to another handset registered to the base. If the directory becomes full during copying the display shows Memory full. If copying is not successful the display shows Dir.At the receiving handset 5. Display shows Receive dir. entries. Press Yes to confirm or No to cancel. 6. When successful the display shows Copied. 7. Press Back to return to the previous menu level. Delete an entry 1. Press. 2. Scroll or to the entry you want. 3. Press Option and scroll to Delete entry and press OK. 4. Press Yes to confirm or No to cancel. 5. Press Back to return to the previous menu level. 27 Using the phone 27 Delete entire directory 1. Press. 2. Press Option and scroll or to Delete all and press OK. 3. Press Yes to confirm or No to cancel. 4. Press Back to return to the previous menu level. Edit call group name 1. Press. 2. Press Option and scroll or to Edit call grp and press OK. 3. Scroll or to the call group you want. 4. Press Option. Display highlights Rename group. Press OK. 5. Press Clear to delete the current name and enter a new name. 6. Press OK to save. 7. Press Back to return to the previous menu level. 28 28 Using the phone Change call group ringtone 1. Press. 2. Press Option and scroll or to Edit call grp and press OK. 3. Scroll or to the call group you want. 4. Press Option. Scroll to Ringtone. Press OK. 5. Press or to choose the ringtone. A sample of each one is played. Press OK to save. 6. Press Back to return to the previous menu level.

Speed dial You can allocate a name and number from the Directory to each of the Speed dial buttons 2 to 0. To copy a Directory entry to a Speed dial 1. Press. 2. Press Option and scroll or to Speed dial and press OK. 3. Scroll or to the Speed dial you want to store the Directory entry in and press OK. 29 Using the phone If a name and number is already allocated to the Speed dial you have chosen

they will be displayed. To reuse this Speed dial see, To edit a Speed dial. 5. If the Speed dial is empty No number is displayed and then all the Directory entries. Scroll or to the entry you want to copy and press OK to save. 6. Press Back to return to the previous menu level. To dial using a Speed dial 1. Press and hold the Speed dial butt on with the number you wish to dial. 2. The display shows Calling and the number being dialled. 31 Sounds 31 Handset ringer 1. Press Menu, scroll t o Sound and press OK. 2. Ringer is highlighted. Press OK. 3. The current External melody is highlighted. Press or to select the ringtone you want for external calls. 4. Scroll to the Internal melody. Press or to select the ringtone you want for internal calls. 5. Scroll t o Ring volume. Press or to set the volume level, or off. 6. Scroll t o Silent. Press or to select Beep or Off. 7. Press OK to confirm. 8. Press Back to return to the previous menu level. Handset beeps 1. Press Menu, scroll t o Sound and press OK. 2. Scroll to Tones. Press OK. 3. Key beeps option is highlighted. Press or t o select On or Off. 4. Scroll t o Confirmation. Press or to select On or Off. You can set different ringtones for external calls and internal calls. Choose from 10 polyphonic and 5 standard handset ringtones. The handset also has 5 ringer volume settings plus Off. If you switch the handset ringer off by pressing you can still hear a tone when you receive an incoming call by changing the Silent setting to Beep.

Your handset can give a beep t o confirm a successful action, such as storing a new phonebook entr y. It can give warning beeps when you are going out of range and when the battery is low. It can also beep ever y time you press a button. You can switch these tones on or off individually. 32 32 Sounds 5. Scroll t o Battery low. Press or to select On or Off. 6. Scroll t o Out of range. Enter a new name. 6. Press OK to save. 7. Press Back to return to the previous menu level. Adjust the display contrast to suit different lighting conditions. As long as you have auto answer set to ON you can answer a call by lif ting the handset off the base. Auto answer ON is the default setting. 34 34 Settings Handset reset Restore your handset to its original factory settings. Base settings Ringer Choose from 5 base ringtones. There are 5 volume levels and Off. 1. Press Menu, scroll to Settings and press OK. 2. Scroll to Base settings. Press OK. 3. Ringer is highlighted. Press OK. 4. The Ringtone option is highlighted. Press OK for all handsets to ring together. Or Scroll or to Select handset. Press OK then press to select the handset you want t o ring first. Press OK. The ring delay option is highlighted. Press or to set the number of rings before the other handsets ring. Press OK. 5. Press Back to return to the previous menu. When you have more than one handset registered to your base, you can set one handset to ring before the others. This allows one handset user t o answer all incoming first, like a receptionist. Choose All handsets if you want all handset to ring at the same time or Select handset to nominate a handset to ring before the others. Dialling mode 1. Press Menu, scroll t o Settings and press OK. 2. Scroll t o Base setting. Press OK. 3. Scroll t o Dial mode. Press OK. 4. Press or to select the dial mode option you want. 5. Press OK to save. 6. Press Back to return to the previous menu. If any existing code is displayed. Press Clear to delete digits. 1.

Press Menu, scroll t o Settings and press OK. 2. Scroll t o Base settings. Press OK. 3. Scroll t o PBX access. Press OK. 4. Enter the code you want, then pr ess OK. 5. Press Back to return to the previous menu level. The default setting is You can change this to your own preferred 4digit number. Press or to select Daily, Once or Off. 6. Scroll t o Ringtone and press or to select the ringtone you want for the alarm. 7. Press OK to save. 8. Press Back to return to the previous menu level. Stop alarm ring When the alarm rings, the display shows Alarm. The alarm rings for 60 seconds. 1. Press Stop to stop the alarm. 40 40 Calls lists IMPORTANT To use Caller Display you mus t first subscribe to the service from your network provider. For more information on BT Calling Features call BT free on To ensure the callers name is displayed, make sure you have stored the full telephone number, including the dialling code in the directory. When a new call is received in the Calls list the icon is displayed. If the number is unavailable, Unavailable is displayed. If the number has been withheld by the caller, Withheld is displayed. If the call is from the operator, Operator is displayed. If the call is from a payphone, Payphone is displayed. If the call is from a callback request, Callback is displayed. If you do not have a Caller Display service, an external call is displayed as External call. When there

are no calls in the calls list, the display shows Empty then will offer the Settings option. Caller Display If you have subscribed to a Caller Display Service, you will be able to see your caller's number on your handset display provided it is not withheld prior to answering the call. If your caller's name is stored in the directory and a number match is found, you will see the caller's name on the display instead. Calls list The Calls list holds up to 20 numbers. The date and time of the call is also stored if available.

<http://www.drupalitalia.org/node/71890>